

SPARE PARTS LIST FOR JCB BACKHOE LOADER

PART NUMBER	DESCRIPTION	MACHINERY
02 / 200877	PULLEY	3CX-4CX
450 / 10204	HUB	3CX-4CX
450 / 10205	GEAR RING	3CX-4CX
450 / 10206	PLANETARY GEAR	3CX-4CX
450/ 10215	GEAR	3CX-4CX
450/ 10800	CASE	3CX-4CX
450 / 11100	HUB	3CX-4CX
450 / 12401	CARRIER	3CX-4CX
450 / 27200	COUPLING	3CX-4CX
453 / 30401	TRUNNION	3CX-4CX
453/ 04402	HUB	4CX
454 / 07401	GEAR SUN	3CX-4CX
458 / 20040	JOINT	4CX
458 / 20041	JOINT	4CX
475 / 37800	SHAFT	3CX-4CX
914 / 39100	SHAFT	3CX-4CX
914 / 60103	SHAFT	3CX
9*18	WHEEL FRONT	3CX
18.4*26	WHEEL REAR	3CX
16.9*28	WHEEL REAR	4CX
331/12043	FLANGE	3CX
123/03433	MUFFLER	
123/07172	MUFFLER	
933/66300	MUFFLER	
02/20024	GEAR PLANET	
04/500217	PUMP	
116/00169	GEAR	
15/905504	CYLINDER	
15/905505	REPAIR KIT	
20/915900	PUMP	
449/10900	PISTON	
450/10228	AXLE SHAFT	
450/12702	BRACKET	
826/00892	BOLT	
910/24803	CABLE	
910/34901	CABLE	
910/48800	CABLE	
910/48801	CABLE	
914/84102	JOINT	
914/86602	SHAFT	
914/89501	SHAFT	
923/02700	OIL COOLER	
923/04800	OIL COOLER	
990/71301	CASE	
15/910800	CYLINDER	