

SPARE PARTS LIST FOR VOLVO LOADER		
PART NUMBER	DESCRIPTION	MACHINERY
4717028-7	GEAR SUN	4400-4500
4717988-2	GEAR PLANET	4400-4500
4717024-6	SHAFT PLANET	4400-4500
4717038-6	GEAR SUN	4400
4717044-4	HUB	4400
4717039-4	GEAR PLANET	4400
4717041-0	SHAFT PLANET	4400
4717040-2	GEAR RING	4400
4717018-8	HUB	4400-4500
4717046	CARRIER PLANET	4400
4717906-4	GEAR RING	4400-4500
4717070-9	GEAR RING	4500-L120B
4717071-7	SHAFT PLANET	4500
4717072-5	GEAR PLANET	4500
4717383-6	HUB	4500
4717726-6	GEAR PLANET	4500
4717730-8	GEAR SUN	4500-L120B
4717870-2	HUB	4500
4870234-4	GEAR	L120B
4870235-1	GEAR PLANET	L90
4870460-5	SHAFT AXLE	4400
11102301-6	GEAR PLANET	L120B
11034005-6	HUB	4400
11034212	GEAR SUN	L90B
11034888-5	SHAFT PLANET	120B
11034889-3	SHAFT PLANET	L120B
62115312-4	BRAKE PISTON	L90-L120B
11034826-5	GEAR PLANET	L180C
11034029	BRAKE GROUP	A35
11034030	BRAKE GROUP	A35
11034096-5	DISC BRAKE	L160
11034271-4	DISC BRAKE	A35
11034736-6	SHAFT PLANET	4400
11035632-6	GEAR SUN	L180C
11035819-9	GEAR PLANET	L90-120c
11035827-2	GEAR SUN	L120B
11093777-8	LINK	L150C
11701115-5	BRAKE PISTON	L160
11052125-9	PROPELLER SHAFT	A35C
11034212	GEAR SUN	L90B
11172545	PROPELLER SHAFT	L110E-L120E